




These instructions are for the installation of our TRX-4 – HPI Venture body mount system. This will allow you to mount an HPI Venture FJ body directly to your Traxxas TRX4 with minimal (if any) modification to your TRX4. These instructions were created using a “Land Rover” TRX4 setup.



If you want the complete look, make sure you pick up the front and rear bumper mounts as well.



1. Remove Rear body mount post and post support.

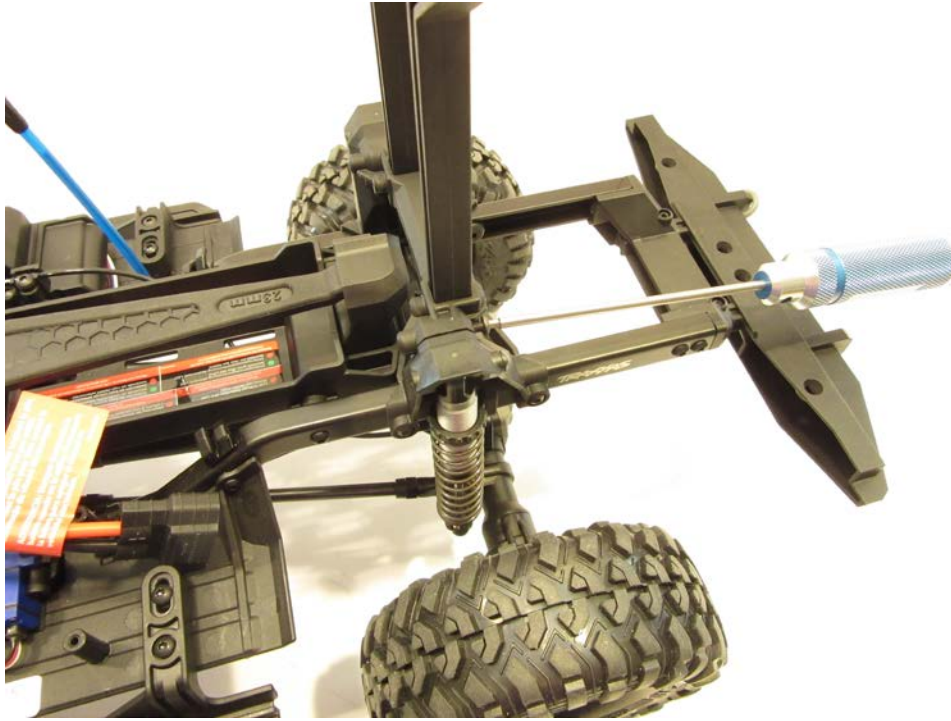



2. Install optional "Extended" Body mount post support from original kit.




3. Install new rear post offset to the rear.





Suggested front & rear starting holes for posts.

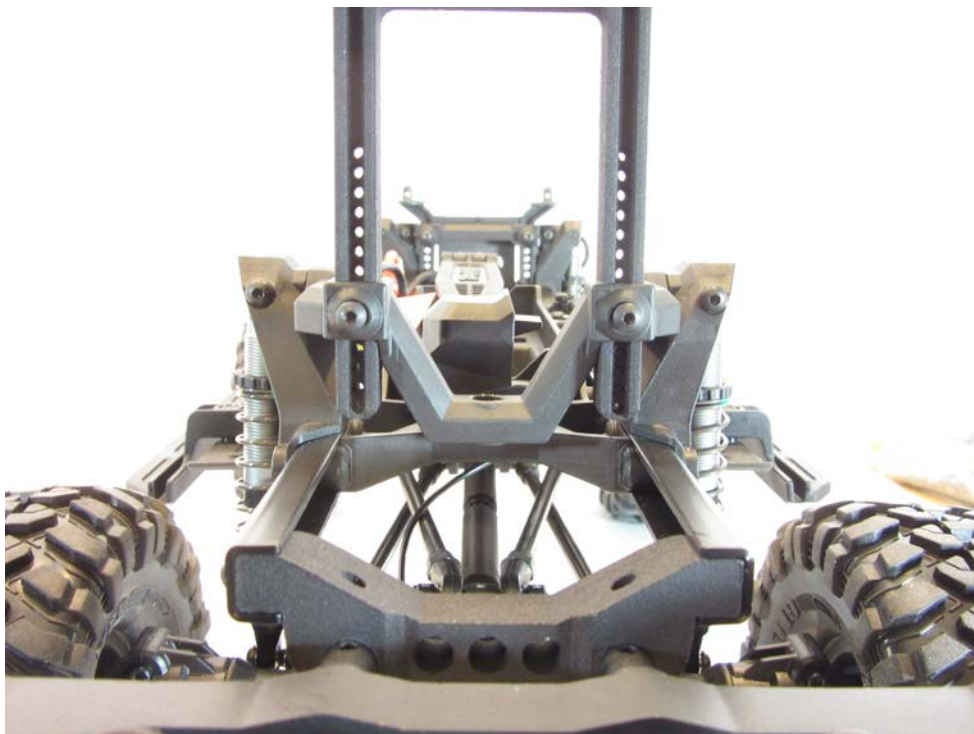



## Troubleshooting

*Issue: The holes in the body are slightly too far apart for the body mounts.*

Solution: Ensure you have the rear body mount post offset as pictured.

*Issue: The holes in the rear body mount post are too small.*

Solution: Because of the tolerances in Shapeways parts we designed the body mount post to err on the side of being too tight. If your screw studs or body clips are too tight you can enlarge the holes.

*Issue: The body mounts posts do not line up with the body at all.*

Solution: Ensure you are using the rear body mount support shown in the instructions and that your shock towers are in the same holes as used for the Land Rover body.

*Issue: The body is where I want it but the TRX-4 sliders sit too low.*

Solution: Space the TRX-4 sliders up using longer M3 hardware and spacers.